

FIORESSO

quickstart





GENERAL OPERATING RULES



Carefully read the instruction manual and warranty limitations before using the machine.

The machine must be connected to a grounded power outlet.

The machine must be cleaned by regularly washing the drainage grid, the drip tray, the capsule container and the tank.


Maintenance may only be performed while the machine is off.

CONTROL PANEL

-  On/off button
-  Small cup sign
-  Large cup sign
-  Water sign
-  Temp. sign



MACHINE OVERVIEW

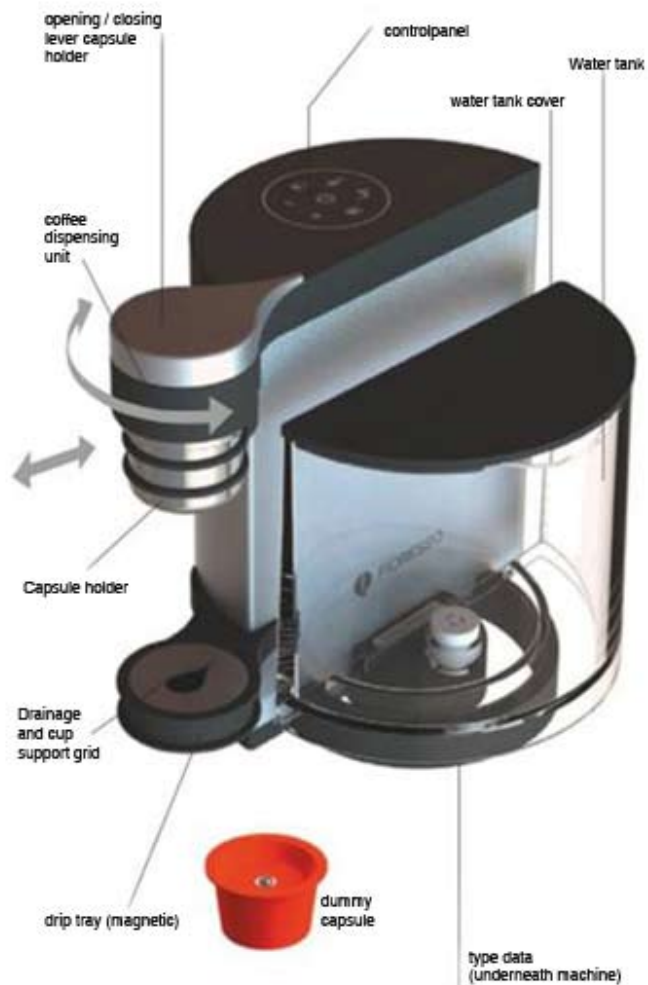

IMPORTANT SAFEGUARDS

When using an electric appliance, basic safety precautions should always be adhered to. These include the following:

- Before connecting the machine to the power outlet make sure the water tank is filled with water.
- Never use the machine if the water tank is empty.
- Never use the machine without capsule.
- Connect the machine to earthed power outlet only.
- Read all the instructions before using the machine.
- Never immerse the machine in water.
- Never put the machine in the dishwasher.
- Change the water contained in the tank regularly.
- Do not place the machine on, or near, electrical or gas burners or inside a hot oven.
- The appliance must be used by adults only.
- To protect against fire, electric shock or personal injury do not immerse the cord, plug or the body of the machine in water or any other liquid.
- Do not use the machine for purposes other than those for which it was designed.
- Using accessories not recommended by the manufacturer may result in fire, electric shocks or personal injury.
- Using other capsules than Fioresso espresso capsules may cause damage to the espresso machine.
- **WARNING:** To reduce risks of electric shock or personal injury, repairs should always be done by authorized personnel only. No user serviceable parts are inside.

After changing the water, insert the tank in the machine and check that it is positioned correctly. We recommend descaling the machine at least once per year or after 500 espressos. For descaling use a liquid descaling agent for coffee machines suitable for contact with foodstuffs. Do not throw away the dummy capsule provided in the packaging; you will need it for the next descaling cycles. See the instructions in the Descaling chapter.

It is advisable to keep the original packaging (at least for the duration of the warranty period) in order to ship the machine to a service center for repair or servicing if necessary. Any damage caused by transport without adequate packaging will not be covered by the warranty.

USE AND CARE

Remove the packaging, and check that the machine is in perfect condition before starting the installation. If not, please contact your supplier. Read the safety safeguards before proceeding. Install the machine in a place with a temperature between 5°C and 40°C, and away from water taps and sinks. Unwind the power cord. Plug the power cord into the duly earthed power socket with a power of between 220V and 240V. In case the plug and power socket are not compatible have the plug replaced with a proper one by an authorized servicer.

FIRST INSTALLATION / START UP

Read the instructions carefully.

Install the appliance in a place with a temperature between 5°C and max. 40°C.

Check that the voltage of the power mains is the same as indicated on the data plate of the appliance (located on the rear of the machine).
Connect the appliance to a power socket that guarantees a minimum supply of 10A if fed between 220 V and 240 V and efficiently earthed.
If the plug and outlet are not compatible, have the plug replaced with a proper one by an authorized service center.

Place the machine on a countertop away from water taps and sinks.

After removing the packaging, check that the appliance is in perfect condition before installation.

USING THE APPLIANCE

This machine has been developed to make perfect ristrettos and espressos, using Fioresso espresso capsules only.


The drip tray is removable from the base in order to allow for a taller cup.

SWITCHING ON AND OFF



To switch on the machine, press the on/off button in the center of the control panel. The small cup sign and the large cup sign light up with a fixed white light.
The machine is ready to dispense a ristretto or an espresso coffee.
The machine starts heating only after you have selected the small cup (ristretto) or the large cup (espresso).
After 2 minutes without using, the machine switches off automatically. The two luminous cups signs switch off.

PREPARING THE COFFEE

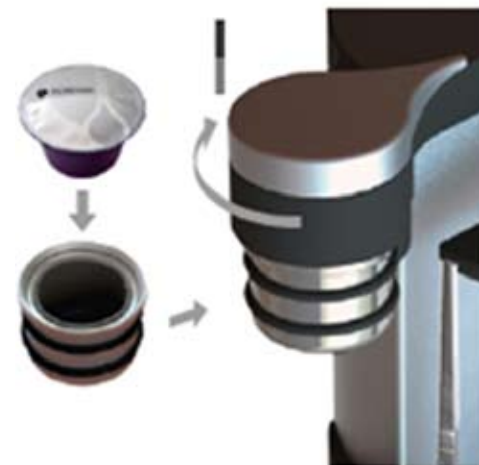

The Fioresso espresso machine has been developed for the exclusive use of Fioresso espresso capsules.
Place a cup on the cup support grid.
Insert the capsule in the capsule holder.
Insert the capsule holder in the coffee dispensing unit.
Turn the opening/closing lever to the right until the stripe on the lever and the machine align with each other.

Always take care to turn the opening/closer lever sufficiently to the right.



Press the small cup sign to dispense a ristretto or the large cup sign to dispense an espresso.



The cup sign selected lights up with a fixed white light, while the perimeter of the control panel is lit up gradually.
The machine is reaching the necessary temperature and will start to dispense the espresso after about 30 seconds.



When the light in the perimeter of the control panel switches off, the selected cup remains lit with a fixed white light and the espresso is dispensed



Immediately afterwards, the machine starts loading water for the next coffee.
Wait until the loading cycle is finished before removing the used capsule.
At the end of the cycle, the two cups are lit with a fixed white light: the machine is ready to prepare other coffee.

Note: Drip tray is removable from the base in order to place a bigger cup.

To prepare multiple coffees proceed as follows:

Check the water level in the tank. If the tank icon on the control panel is lit with a fixed white light this indicates that the tank is empty.
Turn the opening/closing lever of the capsule holder to the left. Remove the used capsule from the capsule holder, insert a new capsule and repeat the procedure described above.

Attention:

The machine is provided with an automatic stop, but dispensing of coffee can be stopped at any time by pressing the same cup sign already selected.
To enjoy the perfect espresso it is recommended to change the water in the tank regularly and to use the exclusive Fioresso glass cups to preserve the required temperature.
Distilled or highly filtered water is not suitable for making coffee.

CHANGE SETTINGS

To modify the amount of water dispensed and/or the temperature, proceed as follows:



Press and hold the on/off button for at least 5 seconds.
The small cup icon and the large cup icon light up with blinking white lights.
Press the cup icon from which you want to change the setting.



The two icons with the symbol of the thermometer and the water tank start to blink with a white light.
Press the icon from which you want to change the setting (temperature level or cup volume).



The number of marks on the circular perimeter indicates the current setting.
Choose the new value by pressing the + or – symbol.
Press the cup icon selected previously to return to the previous selection, otherwise press the cup icon a second time to leave the programming.
The changes have been saved.

To restore the default factory settings, proceed as follows:

Press and hold the on/off button for 5 seconds. The small cup icon and the large cup icon light up with blinking white lights. Press the thermometer icon and the water tank icon at the same time. Both icons light up in red, then in blue.

At this point reset is completed.



FIORESSO

www.fioresso.com